



## *Service Manual*

For the complete PDF manual  
please visit [www.LaserPros.com](http://www.LaserPros.com).

**Optra™ E**  
**4026-0XX**

- ***Table of Contents***
- ***Start Diagnostics***
- ***Safety and Notices***
- ***Trademarks***
- ***Index***



*Lexmark and Optra are trademarks of  
Lexmark International, Inc., registered  
in the United States and/or other  
countries.*

### **Third Edition (April 1997)**

The following paragraph does not apply to the United Kingdom or any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions of the publication. Improvements or changes in the products or the programs described in this publication may be made at any time. Publications are not stocked at the address given below; requests for publications should be made to your point of purchase.

Comments may be addressed to Lexmark International, Inc., D22A/035-3, 740 New Circle Road NW, Lexington, Kentucky 40550, U.S.A. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Lexmark and Optra are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

Other trademarks are the property of their respective owners.

**© Copyright Lexmark International, Inc. 1995, 1997**  
**All rights reserved.**

#### **UNITED STATES GOVERNMENT RESTRICTED RIGHTS**

This software and documentation are provided with RESTRICTED RIGHTS. Use, duplication or disclosure by the Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 and in applicable FAR provisions: Lexmark International, Inc., Lexington, KY 40550.

Contents

**Notices and Safety Information . . . . .vi**

    Laser Notice . . . . . vi

    Safety Information. . . . . xvi

    Ozone Information . . . . . xix

**Preface . . . . .xx**

**General Information . . . . .1-1**

    Options . . . . . 1-1

    Maintenance Approach. . . . . 1-1

    Tools Required For Service . . . . . 1-1

    Acronyms . . . . . 1-2

**Diagnostic Information . . . . .2-1**

    Start . . . . . 2-1

        Service Error Codes . . . . . 2-2

        User Error Message Table . . . . . 2-6

        User Secondary Error Message Table . . . . . 2-8

        Power-On Self Test (POST). . . . . 2-10

        POST Symptom Table . . . . . 2-12

        Symptom Table . . . . . 2-13

    Service Checks. . . . . 2-15

        Charge Brush Service Check. . . . . 2-15

        Cover Interlock Service Check. . . . . 2-16

        D-Roll Assembly Service Check. . . . . 2-16

        Exit Sensor Service Check. . . . . 2-17

        Fan Service Check. . . . . 2-17

        Cold Fuser Service Check . . . . . 2-18

        Hot Fuser Service Check . . . . . 2-20

        Input Sensor Service Check. . . . . 2-20

        Low Voltage Power Supply Service Check . . . . . 2-22

        Main Drive Motor Service Check . . . . . 2-25

        Operator Panel Service Check. . . . . 2-27

        Optional Paper Tray Two Service Check . . . . . 2-28

        Paper Take-Up Solenoid Service Check . . . . . 2-32

        Parallel Port Service Check . . . . . 2-34

        Paper Feed Service Check . . . . . 2-34

        Paper Feed Frame Assembly Service Check . . . . . 2-37

        Print Quality Service Check . . . . . 2-38

        Registration Service Check . . . . . 2-44

        Transfer Assembly Service Check. . . . . 2-44

        Transfer Corona Service Check. . . . . 2-45

        ROM SIMM Service Check . . . . . 2-45

<b>Diagnostic Aids</b> .....	<b>3-1</b>
Power-On Self Test (Post) .....	3-1
Diagnostic Tests .....	3-3
Printer Diagnostic Test .....	3-3
Service Diagnostic Test Page .....	3-4
User Mode Print Test Page .....	3-6
Paper Feed Timing .....	3-8
Fuser Operation .....	3-9
Configuration Mode .....	3-10
Configuration Mode Operator Panel Overlay .....	3-10
Operator Panel Configuration Mode Button Definition ..	3-11
Hex Trace .....	3-12
Restoring Factory Defaults .....	3-13
<b>Repair Information</b> .....	<b>4-1</b>
Handling ESD-Sensitive Parts .....	4-1
Adjustment Procedures .....	4-2
Print Registration Adjustment .....	4-2
Removal Procedures .....	4-3
Screw Identification Table .....	4-3
Board Cage Removal .....	4-4
Cover Removals .....	4-4
Controller Board Removal .....	4-5
D-Roll Removal .....	4-6
Engine Board Removal .....	4-6
Exit Sensor Removal .....	4-6
Exit Sensor Flag Removal .....	4-6
Exit Paper Feed Roller Assembly Removal .....	4-7
Fan Removal .....	4-7
Fuser Lamp Removal .....	4-7
Fuser Lower Frame Assembly Removal .....	4-8
Fuser Upper Frame Assembly Removal .....	4-8
Fuser Paper Separator Removal .....	4-8
HVPS Board Removal .....	4-9
HVPS Cover Removal .....	4-9
Left Side Plate Removal .....	4-9
LVPS Removal .....	4-10
Main Drive Motor Removal .....	4-10
Main Drive/Paper Feed Gears Removal .....	4-10
Manual Paper Feed Guide Plate Removal .....	4-10
Operator Panel Removal .....	4-11
Paper Entry Sensor Removal .....	4-11
Paper Entry Sensor Flag Removal .....	4-11
Paper Feed Frame Assembly Removal .....	4-12

Removal Procedures (continued)

Paper Feed Solenoid Removal . . . . . 4-12

Paper Feed Input Tray Assembly Removal . . . . . 4-12

Paper Lift Plate Assembly Removal . . . . . 4-12

Paper Separator Removal . . . . . 4-13

Printhead Removal . . . . . 4-13

Print Media Selection Lever Removal (06C/06F/071) . . 4-13

Second Paper Tray Option Connector Removal . . . . . 4-13

Thermal Fuse Removal (06A/06B/06D/06J/070) . . . . . 4-14

Thermostat Removal (06C/06F/071) . . . . . 4-14

Thermistor Removal . . . . . 4-14

Transfer Unit Removal . . . . . 4-14

**Connector Locations . . . . . 5-1**

Low Voltage Power Supply . . . . . 5-1

High Voltage Power Supply . . . . . 5-2

Engine Board . . . . . 5-3

Second Paper Tray Sensor Board (Option) . . . . . 5-7

Controller Board . . . . . 5-7

Paper Exit Sensor . . . . . 5-11

Paper Entry Sensor . . . . . 5-11

Paper Feed Solenoid . . . . . 5-11

**Parts Catalog . . . . . 6-1**

How To Use This Parts Catalog . . . . . 6-1

Assembly 1: Covers . . . . . 6-2

Assembly 2: Frame . . . . . 6-6

Assembly 3: Printhead . . . . . 6-12

Assembly 4: Paper Feed Input Tray . . . . . 6-14

Assembly 5: Paper Feed Frame . . . . . 6-16

Assembly 6: Fuser . . . . . 6-18

Assembly 7: Electronics . . . . . 6-22

Assembly 8: Transfer Assembly . . . . . 6-26

Assembly 9: Option - Second Paper Drawer . . . . . 6-28

Assembly 10: Options . . . . . 6-34

Assembly 11: Miscellaneous . . . . . 6-35

**Index . . . . . X-1**

For the complete PDF manual  
please visit [www.LaserPros.com](http://www.LaserPros.com).